Technical Datasheet PowerValue 11 RT 1-10 kVA

Classification IEC/EN 62040-3

VFI-SS-111

Working mode

on-line double conversion

Module power rating

1-10 kVA

Paralleling

up to 2 units (6-10 kVA)

Output power factor

0.9

Efficiency double conversion

up to 93%

Efficiency in ECO-MODE

up to 97%

Maximum weight w/out batteries

28.1 kg

Input current distortion THDi

<5 %

Input power factor (PF)

0.99


Communication cards

SNMP / relay card

Mechanical configuration

Rack-Tower with rotatable display



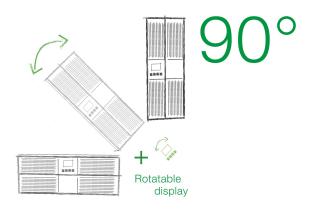

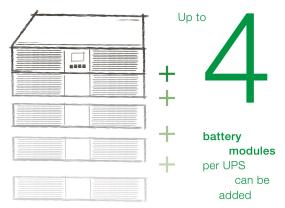


Table of contents

UPS Features	3
Frequency conversion	
Cold start	
Automatic load start-up	
Emergency power off (EPO)	
Fan speed control	
Wide input voltage and frequency range	
Generator compatibility	
Paralleling	3
Design flexibility	
Increasing the runtime	
	_
Batteries	5
UPS battery type	
External battery type module	
Rear view	6
1-2 kVA	6
3 kVA	6
6 kVA	6
10 kVA	7
Connectors / Sockets	
Options	
Rack mounting kit	8
Network interface card	8
Sensors	8
Relay interface card	8
The standard of the standard o	
Technical specifications	
General data	
Input characteristics	10
Output characteristics	10
Battery characteristics	11
User interface	
Display & mimic diagram	12
Clearances	13
Heat dissipation	
Cable & fuses	
Ratings	1.5



UPS features

Frequency conversion

Operating as a frequency converter, PowerValue 11 RT not only converts the power supply frequency (50 Hz to/from 60Hz), but it also protects the load from power disturbances and guarantees additional battery power in case of mains failure. The operation and installation is sim-

ple and implies in correctly wiring the UPS and in selecting the frequency conversion mode in the LCD display.

- Input frequency range: 40-70Hz
- Output frequency: 50 or 60 Hz
- Output de-rating: PowerValue 11 RT 1-3kVA: 70% PowerValue 11 RT 6-10kVA: 80%

Cold start

PowerValue 11 RT can be started without being connected to the mains power supply (start up from the batteries).

This feature is specially useful in the following situations:

• To start up and operate the unit even throughout a power outage.

To help identify, during an unsuccessful system start-up, if the malfunction is on the power supply.
 Eg. If the UPS starts-up on battery and does not transfer to online or bypass mode, it is most probable that there is a mains failure.

Automatic load start-up

After a power outage, the UPS transfers to battery. If the batteries are completely discharged and the system shuts down, with the automatic load start up feature, the UPS will restart automatically once the mains power is recovered.

The operator can enable, disable or configure this function through the LCD panel according to the following options:

- UPS will charge the batteries and the inverter will start automatically (default)
- UPS will charge the batteries and start immediately on bypass. In this case, the operator has to start the inverter manually.
- UPS will charge the batteries and no output power will be seen

either on bypass or on inverter. In this case, the operator has to start the inverter manually.

Emergency power off (EPO)

Activating the emergency power off control of the UPS, the AC and the DC sources to the load are entirelly disconnected.

Operation: To recover the UPS's normal status, the EPO connector has to be set back to its original configuration (Normally closed through a jumper in the UPS rear panel). After this, the EPO status has to be cleared through the LCD menu and the UPS will recover its operation in bypass-mode. To transfer the UPS to nverter-mode, the selection has to be made through the LCD display.

Fan speed control

The speed of PowerValue 11 RT fans vary with the load level and with the ambient temperature to minimize the power consumption while keeping



the UPS in a safe working temperature.

Wide input voltage and frequency range

With higher input tolerances, the UPS works longer on bypass or normal mode. This helps reducing the consumption of the batteries when there are small variations in the power supply.

Generator compatibility

Generators power are often routed through the UPS to supply power to the load during long power outages. The UPS acts as a power link that keeps critical systems operational until the generator synchronises with the UPS and picks up the load. With PowerValue 11 RT, the power of the generator should be dimensioned 1.3 times the UPS rated power.

Paralleling

PowerValue 11 RT 6 and 10 kVA UPSs can be installed in parallel to increase the total system power or to add redundancy to the system.

The UPSs are delivered with an inbuilt parallel board and paralleling cables. No additional hardware is required for this installation.

Design flexibility

PowerValue 11 RT is extremely compact and is designed to be posi-

tioned in a tower format or rack-mounted. The display is rotatable and therefore easy adjustable to your configuration needs.

Increasing the runtime


Battery modules are available to increase the system runtime.

The cables for connecting the battery modules to the UPS are integrated to the units and these can be easily pluged together to increase the system's runtime. To connect several battery modules to a group of UPSs in parallel, the battery modules should be firstly connected to each UPS. Only after this procedure is done, the UPSs should be connected in parallel.



Batteries

PowerValue can be configured with matching battery modules to satisfy extended runtime demands. Easily replaceable batteries increase availability and reduce Mean Time to Repair (MTTR).

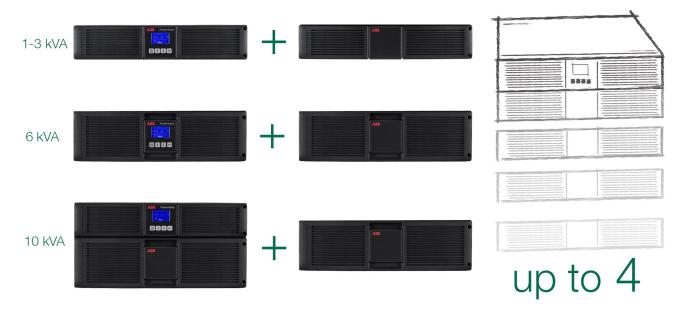

UPS battery type



POWER (kVA)	Internal batteries	Charging current
1 kVA	3 x 12V x 7.2Ah	1.5 A
2 kVA	4 x 12V x 9Ah	1.5 A
3 kVA	6 x 12V x 9Ah	1.5 A
6 kVA	-	8 A
10 kVA	-	8 A

External battery type module



POWER (kVA)	Battery
1 kVA	6 x 12V x 7.2Ah
2 kVA	8 x 12V x 7.2Ah
3 kVA	12 x 12V x 7.2Ah
6 kVA	15 x 12V x 9Ah
10 kVA	20 x 12V x 9Ah

Battery autonomy


POWER	1 KVA*	2 KVA*	3 KVA*	6 KVA*	10 KVA*
UPS internal batteries	5 / 8 / 15 / 33	3 / 6 / 10 / 23	3 / 6 / 10 / 23	-	-
UPS +1 batt module	27 / 40 / 68 / 158	15 / 24 / 41 / 102	15 / 24 / 41 / 107	6/9/16/42	4/6/13/30
UPS +2 batt modules	53 / 80 /124 / 280	30 / 48 / 82 / 177	32 / 48 / 82 / 177	16 / 24 / 42 / 96	13 / 18 / 30 / 68
UPS +3 batt modules	86 / 116 / 184 / 434	50 / 73 / 117 / 262	53 / 79 / 122 / 277	28 / 42 / 60 / 140	20 / 30 / 51 / 110
UPS +4 batt modules	113 / 158 / 246 / 570	68 / 102 / 160 / 335	74 / 107 / 167 / 290	42 / 55 / 96 / 200	30 / 45 / 68 / 160

*Battery autonomy in minutes at 100 / 75 / 50 / 25% load




Rear view


1-2 kVA

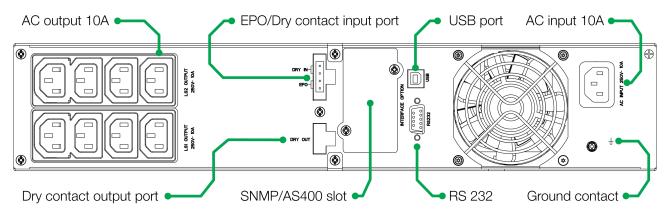


3 kVA

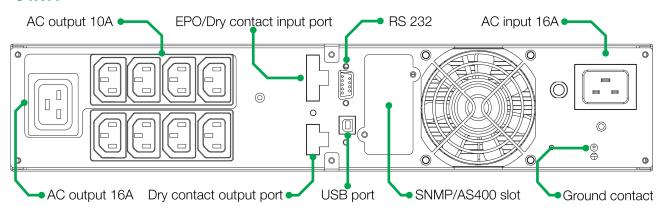

6 kVA

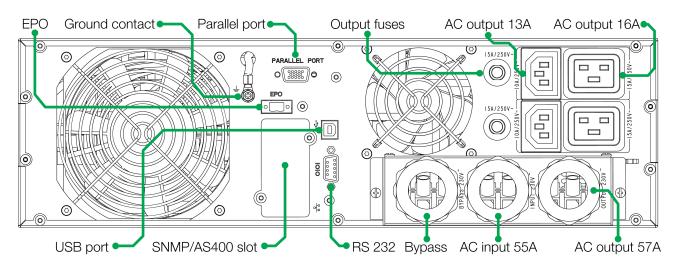

10 kVA

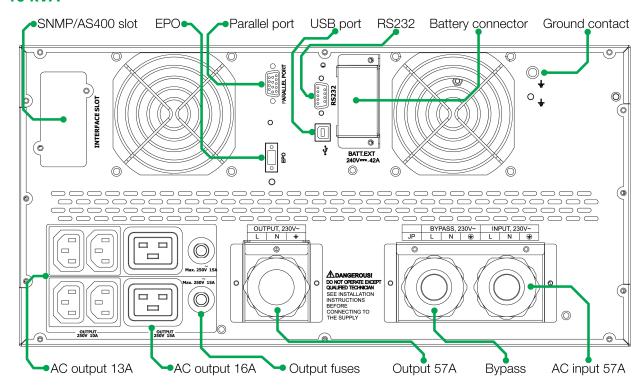

Connectors / Sockets

	Output socket	Input socket	Battery socket
	Qty Type Current Drawing	Qty Type Current Drawing	Qty Type Current Drawing
1-2 kVA	8 IEC-320C13 10 A	1 IEC-320C13 10 A	1 PP45 45 A
3 kVA	8 IEC-320C13 10 A	1 IEC-320C19 16 A	1 PP45 45 A
6 kVA	2 IEC-320C13 13 A 2 IEC-320C19 16 A 1 Terminals 57 A	1 Terminals 55 A D D D D D D D D D D D D D D D D D	1 PP45 45 A
10 k V A	4 IEC-320C13 13 A 2 IEC-320C19 16 A 1 Terminals Cable gland 57 A	1 Terminals 57 A OOO	1 PP45 45 A

Options

Rack mounting kit

Rack rails, screws and metallic plates for easy installation of the UPS to a standard 19' rack.

Network interface card

Enables real-time monitoring of your UPS system via a standard web browser.

ABB's monitoring devices provide real-time visibility of the condition of your power equipment and help in solving problems before they become critical.

Models

- Budget CS121 slot / box
- Standard CS121 slot / box
- MODBUS on RS485 CS121 slot / box



Sensors

Temperature sensors, humidity sensors and alarm buzzers support monitoring the environmental condition and enables an efficient identification of the alarms.

Relay interface card

Provides contact closures for remote monitoring of alarm conditions of PowerValue 11 RT systems.

The card is user-installable, hot-swappable and enables advanced communication between the UPS and the computer.



Technical specifications

GENERAL DATA	1 kVA	2 kVA	3 kVA	6 kVA	10 kVA
Photograph (front view with open doors)		ASS four-time (ASS TOWNS ASS
Apparent power	1 kVA	2 kVA	3 kVA	6 kVA	10 kVA
Active power	0.9 kW	1.8 kW	2.7 kW	5.4 kW	9 kW
UPS type	On-line, transfo				
Parallel capability Battery	Up to 2 frames	(6-10 kVA) 'A) / not included (6-	1014/4)		
Performance classification	VFI-SS-111	A) / Hot included (o-	TORVAJ		
MECHANICAL					
Dimensions (width×height×depth) [mm]	438x86.5x436		438x86.5x608	438x129x594	438x215x594
Weight (with batteries)	16.2 kg	19.7 kg	28.6 kg	20.1 kg	28.1 kg
ACOUSTIC NOISE (acc. To IEC	62040-3)				
in normal mode (at <=25°C) at 100 / 50 % Load	<45 dBA	<50 dBA	<50 dBA	<55 dBA	<55 dBA
in battery mode (at <=25°C) at 100 / 50 % Load	<45 dBA	<45 dBA	<50 dBA	<55 dBA	<55 dBA
SAFETY					
Access Degree of protection against ha	Operator zards and water	r ingress: IP 20			
ELECTROMAGNETIC COMPATI	BILITY				
Compliant to IEC 62040-2 Category Emission / Immunity	C1 (1-3kVA); C	3(6-10KVA)			
ENVIRONMENTAL					
Storage temperature range Operative temperature range	-15°C - +60°C 0°C - +40°C				
Storage (models with batteries)	0°C - +35°C				
Relative humidity	≤ 95% (non-cor	ndensing)			
Max. altitude without de-rating	1000m (above	1000m, 1% de-ratin	g every 100m according	g to IEC/EN 62040-3	3)
ADDITIONAL AND USUAL INFO	_				
Input connection	3 wires, 1 phase				
Output connection Cable entry	3 wires, 1 phase Rear	e + N + PE			
Battery cable entry	Front (1-6kVA)	rear (10kVA)			
Accessibility	Front only				
Air outlet	Back				
OPTIONS	_		-		
Battery cabintes SNMP cards					
Relay card with potential-free co	ontacts (custom	er outputs)			

INCLUDED (DEFAULT)

Parallel Kit (parallel board pre-installed, parallel cable provided with each unit) Single or dual input feed capability (6-10kVA) – No additional hardware needed

Sea freight packaging (carton box)

Back-feed protection Internal (1-3kVA); See manual for 6-10kVA

INPUT CHARACTERISTICS	1 kVA	2 kVA	3 kVA	6 kVA	10 kVA	
Rated voltage (steady-state, r.m.s)	120-276 VA	C (de-rating to 50% a	at 120V)			
Nominal voltage	208 VAC / 2	220 VAC / 230 VAC	/ 240 VAC			
Tolerance, referred to 230V	-33% / +20 a -43% / +20 a	at <100% load, at <80% load, at <60% load, at <40% load				
Frequency, rated	50 Hz / 60	Hz (selectable)				
Frequency tolerance	45 Hz – 55 H	Hz (50 Hz system) / 5	4 Hz – 66 Hz (60 Hz	system)		
Current (r.m.s), rated (with battery charged and input 230V)	4.5 A	9 A	13 A	26 A	45 A	
Current (r.m.s), maximum (with charging batt. and input 230V)	5 A	9.5 A	14 A	33 A	52 A	
Total harmonic distortion (THDi)	≤5% (IEC 61	000-3-4)				
Power factor	0.99 @ 100%	6 load				
Rated short-time withstand current (Icw)		cycles (1-3kVA) cycles (6-10kVA)				
AC POWER DISTRIBUTION SYS	STEM: TN-S A	ND TT				
Phases required	1					

Neutral required Yes

ADDITIONAL AND USUAL INFORMATION

3 wires, 1 phase + N + PE Connection

Cable entry

Walk In/Soft Start Yes (Power supply needed only for first start-up)

OUTPUT CHARACTERISTICS	1 KVA	2 KVA	3 KVA	6 KVA	10 KVA
Rated power:	0.9 kW	1.8 kW	2.7 kW	5.4 kW	9 kW

AC POWER DISTRIBUTION SYSTEM: TN-S AND TT

Available phases 1 Neutral available Yes

Rated voltage 208 / 220 / 230 / 240 VAC (no de-rating)

(steady state, r.m.s.)

Variation in

± 1% normal mode / battery mode

TOTAL HARMONIC DISTORTION (THDU), 100% LOAD, NORMAL MODE:

Linear < 2% Non-linear < 5% (acc. to IEC 62040-3)

TOTAL HARMONIC DISTORTION (THDU), 100% LOAD, BATTERY MODE:

Linear < 2% Non-linear < 5% (acc. to IEC 62040-3)

Voltage unbalance and phase displacement, 100% load un-

balance

N/A

VOLTAGE TRANSIENT AND RECOVERY TIME, 100% STEP LOAD:

Linear 20 ms Non-linear 100 ms (acc. to IEC 62040-3) Transfer normal mode --> 0 ms

battery mode

Frequency (steady-state), 50 / 60 Hz (selectable)

rated

Variation in normal mode ± 10% (frq. Synchronized with mains)



Variation in battery mode ± 10% (free-running)

Max synch phase error (referred to a 360° cycle) ≤3°

Max slew-rate 1 Hz/s

Nominal current (Inom), r.m.s. rated 13 A 26 A 45 A 4.5 A 9 A

0.1 @150% load; 1.5 @125% load; 12 @110% load (1-3kVA) 0.1 @150%load; 30 @125%load; 120 @110%load (6-10kVA) Overload on inverter

1.5 A x ln 1.5 A x ln

1.5 A x In

200 A

1.5 A x In

400 A

1.5 A x In

600 A

Fault clearing capability normal mode and battery mode (100ms)

Crest factor

3:1 (Load supported) Load power factor, rated 0.9

Displacement (permissible lead-lag range)

0.5 lead - 0.5 lag

AC / AC EFFICIENCY IN NORMAL	L MODE, LINEAR LOAD:
------------------------------	----------------------

100% load	88.3%	89.6%	92.5%	90.9%	93.0%	
75% load	87.7%	88.2%	91.6%	93.0%	94.6%	
50% load	84.6%	86.5%	90.6%	93.5%	94.5%	
25% load	76.2%	80.6%	88.8%	93.3%	94.4%	
Eco-mode efficiency, linear load	≥95%	≥95%	≥95%	≥97%	≥97%	

BYPASS-AUTOMATIC: STATIC SWITCH

Transfer time: inverter à by-pass / bypass à inverter / in-verter à eco-mode / eco-

<4 ms / <4 ms / <4 ms / <10 ms

mode à inv.

Fault clearing capability (bypass mode) for 20 ms

200 A

Continuously @ <130% load 1 minute @ 130-180% load

Immediate @ >180% load

Overload on bypass mode

Yes, standard

120 A

Bypass protection fuse or circuit breaker rating

Bypass - maintenance

External fusing according to section Cables and Fuses

BATTERY CHARACTERISTICS	1 kVA	2 kVA	3 kVA	6 kVA	10 kVA
Technology	VRLA, vented lead-	-acid			
Number of 12 V blocks (fixed)	3	4	6	-	-
Battery charger max. current charger capability	1.5 A	1.5 A	1.5 A	8 A	8 A
Battery charger max. power charger capability	54 W	72 W	108 W	1440 W	1920 W
Floating voltage (VRLA)	2.275 VDC/cell				
End of discharge voltage (VRLA)	Load dependent ~	1.6 VDC/cell			
r.m.s. ripple current (% of the battery capacity)	±1%				
Temperature compensation	Yes				
Battery test	Automatic and peri	odic battery test (sel	ectable)		

1) Tolerances of \pm 0.2% applies / 2) With recommended fuses, see section Cables and Fuses



USER INTERFACE - COMMUNICATION

STANDARD ITEMS

RS232 on Sub-D9 port For service and for SNMP box Input sockets IEC 320 C13 (1-3kVA)

SNMP/AS400 slot For integration of optional SNMP and relay card

Display Dot matrix 128x64 LCD display


OPTIONAL ITEMS

SNMP card For monitoring and integration in network management


Relay card For additional signal-monitoring and control

DISPLAY & MIMIC DIAGRAM

1-3 kVA

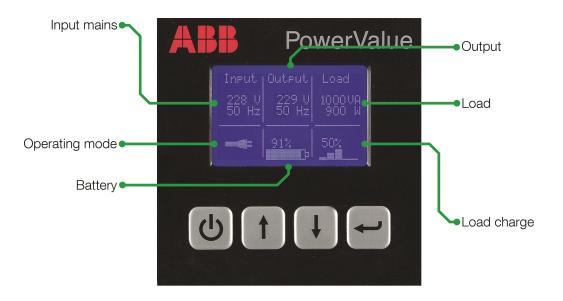

6-10 kVA

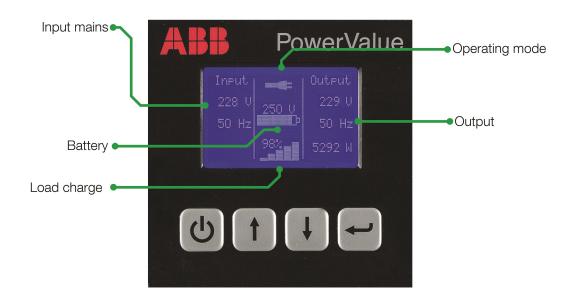



CLEARANCES	1 kVA	2 kVA	3 kVA	6 kVA	10 kVA
MINIMUM CLEARANCI	ES FOR SINGLE UPS				
4	25 cm	25 cm	25 cm	50 cm	50 cm
3	0 cm	0 cm	0 cm	0 cm	0 cm
C	25 cm	25 cm	25 cm	50 cm	50 cm
)	0 cm	0 cm	0 cm	0 cm	0 cm
MINIMUM CLEARANCE	ES FOR UPS PLUS OTH	IER CABINETS IN	ROW		
4	25 cm	25 cm	25 cm	50 cm	50 cm
В	0 cm	0 cm	0 cm	0 cm	0 cm
C	25 cm	25 cm	25 cm	50 cm	50 cm
)	0 cm	0 cm	0 cm	0 cm	0 cm
	<u>U</u> F	os TOF	D		



0000

Cable sections and fuse ratings recommended according to (IEC 60950-1)

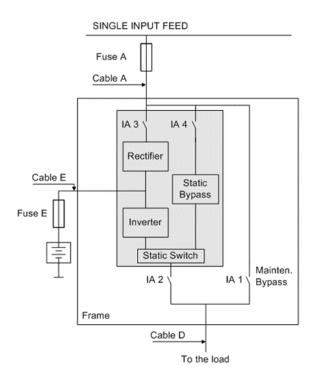

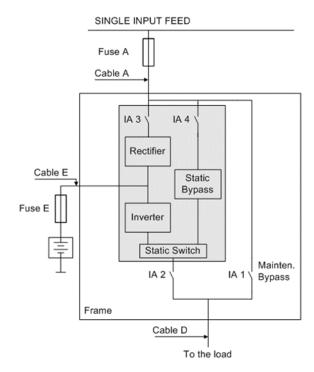

RATINGS	1 kVA	2 kVA	3 kVA	6 kVA	10 kVA
SINGLE INPUT FEED					
Input fuse A-Type: gL or CB	1 x 10 A	1 x 16 A	1 x 20 A	1 x 60 A	1 x 80 A
Input cable A	$3 \times 2.5 \text{ mm}^2$	3 x 2.5 mm ²	3 x 2.5 mm ²	3 x 10 mm ²	3 x 16 mm ²
Output cable D	$3 \times 2.5 \text{ mm}^2$	3 x 2.5 mm ²	3 x 2.5 mm ²	3 x 10 mm ²	3 x 16 mm ²
Battery fuse E-Type: gR or CB	2 x 32 A	2 x 50 A	2 x 50 A	2 x 60 A	2 x 80 A
Battery cable E	$3 \times 6 \text{ mm}^2$	3 x 10 mm ²	3 x 10 mm ²	3 x 10 mm ²	3 x 16 mm ²
DUAL INPUT FEED (STANDARD	VERSION)				
Input fuse B-Type: gL or CB	1 x 10 A	1 x 16 A	1 x 20 A	1 x 60 A	1 x 80 A
Input Cable B	$3 \times 2.5 \text{ mm}^2$	$3 \times 2.5 \text{ mm}^2$	$3 \times 2.5 \text{ mm}^2$	$3 \times 10 \text{ mm}^2$	3 x 16 mm ²
Input fuse C-Type: gR or CB	1 x 10 A	1 x 16 A	1 x 20 A	1 x 60 A	1 x 80 A
Input cable C	$3 \times 2.5 \text{ mm}^2$	3 x 2.5 mm ²	3 x 2.5 mm ²	$3 \times 10 \text{ mm}^2$	3 x 16 mm ²
Output cable D	$3 \times 2.5 \text{ mm}^2$	3 x 2.5 mm ²	3 x 2.5 mm ²	$3 \times 10 \text{ mm}^2$	3 x 16 mm ²
Battery fuse E-Type: gR or CB	2 x 32 A	2 x 50 A	2 x 50 A	2 x 60 A	2 x 80 A
Battery cable E	3 x 6 mm ²	3 x 10 mm ²	3 x 10 mm ²	3 x 10 mm ²	3 x 16 mm ²

Contact us

www.abb.com/ups ups.sales@ch.abb.com © Copyright ABB. All rights reserved. Specifications subject to change without notice









